

# NX-P16 16 Pager Wireless Restaurant Calling System

## Key Feature:

- Keyboard Type: Touch Keyboard
- Transmit current: 130mA
- Working voltage: DC 9V-1A
- Adapter: AC 100-240V 50/60Hz
- Frequency: 433 MHz



## Product List

Keyboard		Pager	
Keyboard dimension	9.3*8.8*1.2inch	Pager dimension	3.9*2*0.43inch
Keyboard material	ABS	Pager material	ABS
Transmitting power	130mW	Distance of transmission	About 300 meters in open field
Keyboard frequency	433MHz	Pager frequency	433MHz
Power adapter	Input: AC 100-240V, 50/60Hz Output: DC 9V, 1A	Pager battery	Built-in 3.7V 200mAh Rechargeable lithium battery
		Standby time	Approximately 20 hours
Key press method	Touch panel	Reminding method	Beep, Vibration and Flash
Manufacturer	Loukiene	Brand	Nexakey
FCC ID Number	2AZSV-F101	Model	NX-P16

## Instructions

Connect the base to power, and the screen will show 888, and a UXX number and show the keyboard ID.

When the screen is showing the keyboard ID, within 2 seconds press the GEAR button  to enter setup mode.

(If can not enter the setup mode, please disconnect and reconnect the power cord. And try the procedure above again)

### F1 Set the Keyboard ID (setting range "001~999")

- 1.Enter setup mode, the screen will display F1.
- 2.Press "GO", screen will display Keyboard ID and flash.
- 3.Input new Keyboard ID and press GO button to save.
4. After changing the Keyboard ID, the pagers needs to be paired with this keyboard again.

Please do not change it unless there are special request!

### F2 Set the Pager's Number (setting range "001~999")

- 1.Enter setup mode, the screen will display F1.
- 2.Press UP/DOWN to go to F2 and press GO.
- 3.Input the Pager's number.
- 4.Pick up the pager from the base.
5. Press GO within 4 seconds, and the pager will beep. And the setting is successful.
6. Repeat steps 3 to 5 until all pagers are paired.

### F3 Set the beep/buzz time (setting range "0-250 seconds")

- 1.Enter setup mode, the screen will display F1.
- 2.Press UP/DOWN to go to F3 and press GO.
- 3.Screen will show 0. Input a number(from 0-250)
- 4.Pick up the pager from the base.
5. Press GO within 4 seconds, and the pager will beep. And the setting is successful.
6. Repeat steps 3 to 5 until all pagers are set.

When the time is set to "0", the pager will keep beeping / buzzing when called, until the cancel button is manually pressed or it is put back into the base.

### F4 Turn on or off pager Beep

- 1.Enter setup mode, the screen will display F1.
- 2.Press UP/DOWN to go to F4 and press GO.
- 3.Now the screen will show 0. Input a number(0,1,2,3)
- 4.Pick up the pager from the base.
5. Press GO within 4 seconds, and the pager will beep. And the setting is successful.
6. Repeat steps 3 to 5 until all pagers are set.

0: No beep, 1: slow speed (2 beeps within 3 seconds),  
2: medium speed (3 beeps within 3 seconds),  
3: fast speed (8 beeps within 3 seconds))

### F5 Turn on or off pager Shake

- 1.Enter setup mode, the screen will display F1.
- 2.Press UP/DOWN to go to F5 and press GO.
- 3.Now the screen will show 0. Input a number(0 or 1)
- 4.Pick up the pager from the base.
- 5.Press GO within 4 seconds, and the pager will beep. And the setting is successful.
6. Repeat steps 3 to 5 until all pagers are set.

(0: Vibration OFF , 1: Vibration ON)

### F6 Turn on or off pager Flash

- 1.Enter setup mode, the screen will display F1.
- 2.Press UP/DOWN to go to F6 and press GO.
- 3.Now the screen will show 0. Input a number(0, 1 or 2)
- 4.Pick up the pager from the base.
- 5.Press GO within 4 seconds, and the pager will beep. And the setting is successful.
6. Repeat steps 3 to 5 until all pagers are set.

(0: Flash off, 1: Slow Flash, 2: Fast Flash)